


Befestigungsschablone für Shocklog 248 & 208

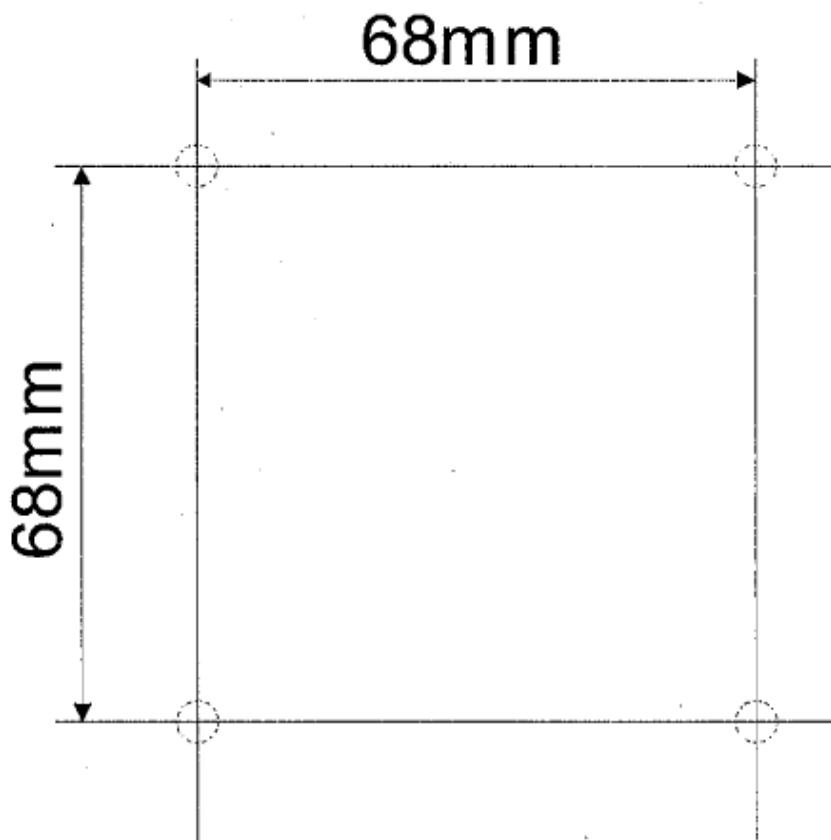

Drill Ø10.2/10.5 x 17mm deep min if using the Flex Lock AV fasteners
(Part of the fixing kit – order code 40400MK)
Alternatively drill/tap to suit M5 fixings